


048.1, 048.2, 048.3, 048.4

ę przy pchaniu
do bazy i przy



Tłok jest prowadzony w korpusie na całej jego długości.

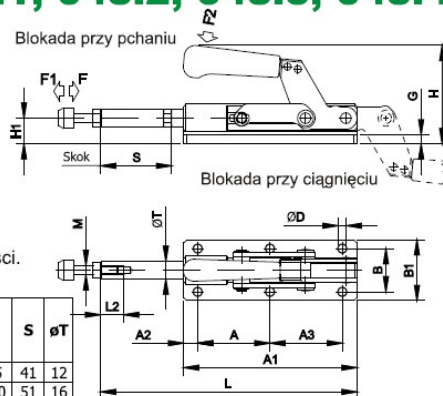

Nr		F [daN]	F1 [daN]	F2 [daN]	A	A1	A2	A3	B	B1	øD	G	H	H1	L	L2	M	S	øT
048.1	0,7	360	170	9	35,0	108	16,0	41,5	41,5	56	6,5	5	80	18	153	25	M8x35	41	12
048.2	1,0	1100	180	12	35,0	128	12,5	41	41,0	57	8,5	7	90	21	178	30	M10x50	51	16
048.3	2,1	1800	210	14	71,0	172	15,0	71	54,0	68	8,5	9	113	27	250	40	M10x50	75	20
048.4	3,7	3000	250	18	90,5	217	17,5	90,5	54,0	76	10,5	11	118	32	321	50	M12x75	101	22